

Fusion Research OMS V1.5 Module Application Guide

Description

These modules allow any Ethernet-equipped Crestron 3-series processor to control Fusion Research Ovation Music Streamers.

The current version allows for control of up to five streamers associated with one Ovation Server.

Supported Processors

This module is supported on any 3-series processor with Ethernet.

Ethernet Configuration Information

These modules utilize SIMPL+ direct sockets to communicate with the OMS. Direct configuration is not needed, other than providing the server module the IP address of the server and the MAC address(es) of the player(s) being controlled



This module was designed to run against any 3 series processor and was not tested against a 2 series control system. We have utilized the 3 series architecture to deliver the best user experience possible. There is substantial memory and processing overhead needed for the Ovation Music Server and string lengths may exceed 255 characters. Thus we have decided to only support 3 series control systems and limiting the total number of players to 5 to accommodate this. Running this in a 2 series control system or expanding the module to more than 5 players could result in unexpected operation. Each system is different, please take your situation and these recommendations into consideration when running these modules.

This module is built to use two modules to work together, the player module and server module. The server acts as the traffic cop directing traffic to each player module. Each player that is connected to the server has a unique MAC address. The MAC address is entered into a parameter on the server module and then traffic for that players mac address is routed out the corresponding serial outputs.

MAC Addresses and Players

For older OMS hardware the players are identified and controlled by MAC address. To locate these browse to the server configurator at <u>http://fusionmusic:4742/</u> and select Player(s). Once on the players page you can see the players and MAC addresses that are physically on that server. Remote players are accessed by browsing to remote players.



For newer PlayFi hardware download and install the Ovation Configuration Utility. Select Manage -> Players, then double click the players MAC address. Copy the MAC out of the player configuration and paste into the Server parameter.

ridyer (50	urce) Management							
Players								
Enabled	Name	Kind	Mac Address	Server	Playback Hardwa	are (Device)	Status	Squeezelite Swite
Yes	1 Zone_1_(analo	Physical	98:fe:95:00:07:7e	Built-In Server	analog1B		Running	-R -u vLX -a 32
Yes Yes	2 Zone_2_(analo 3 Zone_3_(digital)		yer Configuration	0.11.0		X	Running	-R -u vLX -a 32
Yes Yes	4 Zone_4_(playfi) 5 Zone_5_(playfi)		Enabled					-R -u vLE -a 16 -R -u vLE -a 16
		1 2	Jame		AC Address			
Refresh.	. Add		l Zone_1_(analog_pi	ink) 98	l:fe:95:00:07:7e		Start All.	. Stop All
Operati	on Result		Server	0	otions (order matters)			
operation result			Auto-discov		ption			
			Built-In	-1				
		Other		-1	1			
				vi	X			
				-2	E. C.			
				3	2			
Close		Volume Control					Apply	
			Fixed at 100%	- 4	8000	_		
		F P	layback Hardware (ALSA Device)				
	PFS at 10.2.3.105		analog1B			1		App Version: 1

As an example, let's say you want to control the player named Zone1. The MAC address for that zone in the above image is 98:fe:94:00:04:e3. Enter the MAC address EXACTLY how it is in the web interface into the player_1_mac_address parameter of the server module. This MAC address is now associated with player1 in the server module. The server module

will route traffic associated with 98:fe:94:00:04:e3 out the [player1_responce\$] to get parsed by a player module.

•	[system_unsync_all_players]
server_ip_address	10.2.0.131
player1_mac_address	98:fe:94:00:04:e3

Next, you will need to insert the player module into your program. This module will control the player at 98:fe:94:00:04:e3. Tie the [player1_response\$], [player1_command\$], server_ip_address\$, and [player1_mac\$] to the player module.

	fusion_oms_player_v1	
enable	enable player_command\$	player1_command\$
player1_response\$	from_server_module\$	
server_ip_address\$	server_ip_from_server_module\$	
player1_mac\$	player_mac_from_server_module\$	
! S-2.1 : fusion_oms_server_v1		
	fusion_oms_server_v1	
enable	enable	
	server_ip_a	address\$ server_ip_address\$
	[player	r1_mac\$] player1_mac\$
	[player	r2_mac\$]
	[player	r3_mac\$]
	[player	r4_mac\$]
	[player	r5_mac\$]
player1_command\$	[player1_command\$] [player1_re:	sponse\$] player1_response\$

MAC Addresses and Players – NEW PlayFi Hardware

Downlaod and install the Ovation Configuration Utility and connect to the

Browse Paths and Shortcuts

The player module allows you to retrieve the current browse path and directly recall a path or in some cases directly play a station with no need to use the browse context. For example, if you wanted to play a Pandora station without having the user drill down using the browse menu you can simply send a serial sting to the direct path input. A good use case for this is when the only user interface is a CNX-B12 and you want to play a Pandora station. To do this, from SIMPL Debugger or from another UI with the browse menu available, browse to Pandora. Select a station until the browse menu indicates the selected station is playing. Now pulse the [get_shortcuts_path] input and a path will output on the [shortcuts_path\$]. For the first Pandora station the result will be "/app/pandora=0.1.0". Take the [shortcuts_path\$] result, in this case "/app/pandora=0.1.0", and put this into an SIO. Tie a press from the B12 to the SIO, and the output of the SIO gets tied to the [browse_direct_path\$] input. When the B12 button is pressed the SIO will tell the player to play the first Pandora station.

Everything is based on the browse menu. Some items like songs in the library cannot be directly accessed without pressing play now. In this case you are only able to provide a shortcut to the item. The user will still have to press play now on the item they wish to listen to.

API Version

The module requires the OMS Hardware to at least be running API Version 16.7.1.0. To check this version pulse the system_get_version digital input on the server module. The serial output is intended to give you the raw response from the server. If "Unknown function" is returned, please contact Fusion Research to determine the server's version.

Bracketed signals such as "[signal_name]" are optional signals

Fusion Server Module

DIGITAL INPUTS

enable	Hold high to enable the module. When held high, several direct sockets are opened. When this goes low, the sockets are disconnected
[system_power_off_all_players]	Pulse to turn off all players/streamers connected to the
	server
[system_power_cycle_all_players]	Pulse to reboot all players/streamers connected to the server
[system_rescan_library]	Pulse to initiate a full library scan
[system_cancel_rescan_library]	Pulse to cancel a currently running library scan
[sync_all_to_player1]	Pulse to sync all connected players/streamers to player1
[sync_all_to_player2]	Pulse to sync all connected players/streamers to player2
[sync_all_to_player3]	Pulse to sync all connected players/streamers to player3
[sync_all_to_player4]	Pulse to sync all connected players/streamers to player4
[sync_all_to_player5]	Pulse to sync all connected players/streamers to player4

[system_unsync_all_players]	Pulse to unsync all connected players, returning them
	to individual operation
[system_get_version]	pulse to print the version out the [system_version\$]
	output.

ANALOG INPUTS

This module does not utilize any analog inputs

SERIAL INPUTS

[playerx_command\$].Tie from player module player_command\$

DIGITAL OUTPUTS

This module does not utilize any digital outputsLatched high as long as the programmer is happy.

ANALOG OUTPUTS

This module does not utilize any analog outputs.

SERIAL OUTPUTS

server_ip_address	route to all fusion player modules
[playerx_mac\$]	route to appropriate player module player mac\$
[Player_response\$]	route to appropriate player module player response\$
[system_version]	output intended to display the raw server system
	version response for debugging purposes. Not intended
	for display on a touchpanel.

PARAMETERS

Server_ip_address	set to the ip address of the Fusion music server
Playerx_mac_address	set to MAC address of a player found in server web
	interface

Signal and Parameter Descriptions Bracketed signals such as "[signal_name]" are optional signals

DIGITAL INPUTS

pulse to return the browse list to the main menu
tie to button press of browse slider.
pulse to go up the browse menu tree
pulse to browse up one page.
pulse to browse down one page.
pulse to select a browse item.
pulse to play a particular line now. Only available if
[browse_can_play_nowx] is high
pulse to add that line to the end of the queue. Only
available when [browse_can_play_addx] is high.
pulse to play that line next in the queue. Only available
when [browse_can_play_nextx] is high.
pulse to turn off repeat of the now playing queue
pulse to repeat only the now playing song.
pulse to repeat the playlist
pulse to turn off shuffle for the now playing queue.
pulse to shuffle songs in the now playing queue.
pulse to shuffle albums in the now playing queue.
pulse to thumbs up a song. Only available when
[show_ratings_controls] is high.
pulse to thumbs down a song. Only available when
[show_ratings_controls] is high.
pulse to get the shortcut path that you are currently
<pre>browsing at out the [shortcut_path\$]</pre>

ANALOG INPUTS

[browse_set_display_lines]	initialize to the number of browse lines you wish to
	have on your touch panel
[set_page_slider_input]	tie to browse slider touch feedback
[set_volume]	0d-100d analog that sets the volume output of the
	player. Do not ramp this, use an initialize.

SERIAL INPUTS

[browse_direct_path]	use to send the player directly to an item. See demo
	program for examples.

DIGITAL OUTPUTS

DIGITAL OUTPUTS	
[browse_show_slider_fb]	tie to slider visibility. Only high when slider can be used.
[browse_show_next_page_button]	tie to next page button visibility. Only high when next page is available.
[browse_show_previous_page_button]	tie to previous page button visibility. Only high when previous page is available.
[browse_can_play_nowx]	tie to play now visibility. High when that line can play and item now.
[browse_can_play_addx]	tie to add to playlist visibility. High when that line can be added to the playlist.
[browse_can_play_nextx]	tie to play next visibility. High when that line can be played next.
[browse_linex_has_art]	tie to visibility for artwork. High when that line has artwork.
[keyboard_show]	tie to open keyboard feedback for text entry object.
[queue_repeat_none_fb]	
[queue_repeat_song_fb]	
[queue_repeat_playlist_fb]	high when the queue is being repeated.
[queue_shuffle_none_fb]	
[queue_shuffle_song_fb]	high when the queue is shuffling songs
[queue_shuffle_album_fb]	high when the queue is shuffling albums
[show_rating_controls]	tie to visibility for rating controls. High when rating
	controls are available.

ANALOG OUTPUTS

[browse_total_lines]	displays the total lines in the browse list.
[browse_total_pages]	displays the total number of pages
[browse_current_page]	displays the current page number
[browse_current_page_slider]	tie to slider feedback.
[queue_track_elapsed_time]	displays the track elapsed time, use with time analog
[queue_track_total_time]	displays the track total time, use with time analog
[queue_track_progress_time]	
[queue_index]	displays the current postion of the queue
[queue_size]	
[volume_fb]	displays the current volume of the player.

SERIAL OUTPUTS

[player_command\$]	tie to fusion server module.
[browse_title\$]	
[browse_linex_text\$]	displays the current text for the associated browse line.
[browse_linex_art_url\$]	tie to associated lines dynamic graphic object.
[current_title\$]	displays the current channel title
[current_track\$]	displays the current track name
[current_album\$]	displays the current album name
[current_artist\$]	displays the current artist name
[current_art_url\$]	displays the current art url\$. Tie to dynamic graphic for
	album art.
[shortcuts_path\$]	pulse to return the current browse path. Used to take
	the output sting and copy into an SIO to then use with
	the player1_browse_path\$ input.

This module is supported by ControlWorks Consulting, LLC. Should you need support for this module please email support@controlworks.com or call us at 440-449-1100. ControlWorks normal office hours are 9 AM to 5 PM Eastern, Monday through Friday, excluding holidays.

Before calling for support, please ensure that you have loaded and tested operation using the included demonstration program and touchpanel(s) to ensure that you understand the correct operation of the module. It may be difficult for ControlWorks to provide support until the demonstration program is loaded.

Updates, when available, are automatically distributed via Email notification to the address entered when the module was purchased. In addition, updates may be obtained using your username and password at http://www.thecontrolworks.com/customerlogin.aspx.

Distribution Package Contents

The distribution package for this module should include:

fusion_oms_server_v1.5.umc	Crestron User Module for OMS server communications
fusion_oms_player_v1.5.umc	Crestron User Module for Player Control
fusion_oms_server_engine_v1.5.usp	SIMPL+ file used within the server module
fusion_oms_server_engine_v1.5.ush	SIMPL+ header file
fusion_oms_player_engine_v1.5.usp	SIMPL+ file used within the player module
fusion_oms_player_engine_v1.5.ush	SIMPL+ header file
fusion_oms_v1.5_xpanel_exe.vtp	Demo Smart Graphics xpanel 1280x800
fusion_oms_demo_v1.5.smw	Demo program for AV3 processor
fusion_oms_help_v1.5.pdf	This help file

- v1 gary@controlworks.com 2014.09.05
 - -initial release
- v1.1 gary@controlworks.com 2014.09.18
 - -Browse page bug fixes
 - -Debug mode improvements
 - -Fixed issue where volume could get set to 0 at program start
- V1.4 caleb@controlworks.com
- -Update for API version 16.7.8.0
- V1.5 caleb@controlworks.com

Fixed issue when players other than player 1 would start playing content, they wouldn't update the now playing information.

Development Environment

This module version was developed on the following hardware and software. Different versions of hardware or software may or may not operate properly. If you have questions, please contact us.

Fusion Hardware	Software Version
	167152
API Version	16.7.15.2
Crestron Hardware	Firmware Version
Crestron AV3	v1.009.0050
Software	Software Version
Crestron SIMPL Windows	4.02.49
Crestron Vision Tools Pro-e	5.5.11.01
Crestron Core 3 UI Controls	2.02.11.01

Definitions:

ControlWorks, We, and *Us* refer to ControlWorks Consulting, LLC, with headquarters located at 701 Beta Drive, Suite 22 Mayfield Village, Ohio 44143-2330. *You* and *Dealer* refer to the entity purchasing the module. *Client* and *End User* refer to the person or entity for whom the Crestron hardware is being installed and/or will utilize the installed system. *System* refers to all components described herein as well as other components, services, or utilities required to achieve the functionality described herein. *Module* refers to files required to implement the functionality provided by the module and may include source files with extensions such as UMC, USP, SMW and VTP. *Demo Program* refers to a group of files used to demonstrate the capabilities of the Module, for example a SIMPL Windows program and VisionTools Touchpanel file(s) illustrating the use of the Module but not including the Module. *Software* refers to the Module and the Demo Program.

Disclaimer of Warranties

ControlWorks Consulting, LLC software is licensed to You as is. You, the consumer, bear the entire risk relating to the quality and performance of the Software. In no event will ControlWorks Consulting, LLC be liable for direct, indirect, incidental or consequential damages resulting from any defect in the Software, even if ControlWorks Consulting, LLC had reason to know of the possibility of such damage. If the Software proves to have defects, You and not Us must assume the cost of any necessary service or repair resulting from such defects.

Provision of Support

We provide limited levels of technical support only for the most recent version of the Module as determined by Us. We do not provide support for previous version of the module, modifications to the module not made by Us, to persons who have not purchased the module from Us. In addition, we may decline to provide support if the Demo Program has not been utilized. We may withdraw a module from sale and discontinue providing support at any time and for any reason, including, for example, if the equipment for which the Module is written is discontinued or substantially modified. The remainder of your rights and obligations pursuant to this license will not be affected should ControlWorks discontinue support for a module.

Modification of Software

You may not decrypt (if encrypted), reverse engineer, modify, translate, disassemble, or de-compile the Module in whole or part. You may modify the Demo Program. In no event will ControlWorks Consulting, LLC be liable for direct, indirect, incidental or consequential damages resulting from You modifying the Software in any manner.

Indemnification/Hold Harmless

ControlWorks, in its sole and absolute discretion may refuse to provide support for the application of the Module in such a manner that We feel has the potential for property damage, or physical injury to any person. Dealer shall indemnify and hold harmless ControlWorks Consulting LLC, its employees, agents, and owners from any and all liability, including direct, indirect, and consequential damages, including but not limited to personal injury, property damage, or lost profits which may result from the operation of a program containing a ControlWorks Consulting, LLC Module or any component thereof.

License Grant

Software authored by ControlWorks remains the property of ControlWorks. ControlWorks grants You the nonexclusive, non-transferable, perpetual license to use the Software authored by ControlWorks as a component of Systems programmed by You. This Software is the intellectual property of ControlWorks Consulting, LLC and is protected by law, including United States and International copyright laws. This Software and the accompanying license may not be transferred, resold, or assigned to other persons, organizations or other Crestron Dealers via any means.

The use of this software indicates acceptance of the terms of this agreement.

Copyright (C) 2014-2016 ControlWorks Consulting, LLC All Rights Reserved – Use Subject to License. US Government Restricted Rights. Use, duplication or disclosure by the Government is subject to restrictions set forth in subparagraphs (a)-(d) of FAR 52.227-19.