



URC PSX-2 iPod Dock Module Application Guide

Description

This module allows a 2-Series or 3-Series Crestron processor to control the Universal Remote Control PSX-2 via a combination of TCP and UDP. TCP and UDP communications and the well-engineered dock combine to make a fast module to provide a great user experience. Enabling your clients to watch their favorite videos on a local or distributed video system, the dock provides unbalanced audio and component video outputs. More details of the dock can be found on [Universal Remote Controls](http://www.universalremotecontrols.com) website.

The PSX-2 support includes:

- Shortcuts for browsing immediately by playlists, artists, songs, albums, genres, podcasts, audio books, and composers
- Browse the iPod's contents on a touchpanel in a configurable list form
- Ability to browse or manage the PSX-2's jukebox
- Shuffle and repeat controls
- Playback transport controls
- On-screen navigation control with menu shortcuts

Supported Processors

This module is supported by any 2-series or 3-series processor equipped with an Ethernet port. This module also requires that the 2-Series processor is running firmware version 4.xxx.xxxx or later, or a 3-series processor running firmware version 1.002.000 or later.

Compatibility			Processor Requirements	
				


urc_psx-2_v3
Telephone: (+1)440-449-1100

support@controlworks.com


ControlWorks Consulting, LLC
<http://www.controlworks.com>

Ethernet Configuration Information

This module requires that the processor have a TCP/IP and a UDP/IP connection to the URC PSX-2. Insert a TCP/IP client symbol into your program. Configure the TCP/IP client as shown below, taking care to enter the IP address of the PSX-2 you are controlling. The IP ID will vary depending on what order IP devices are entered into your program, or the IP ID number scheme of your system.

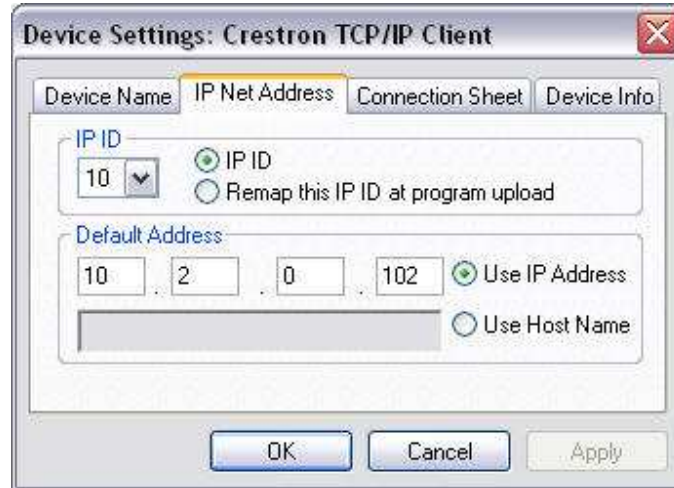

Declare the TCP/IP client as shown below, taking care to set the port to 49749d.

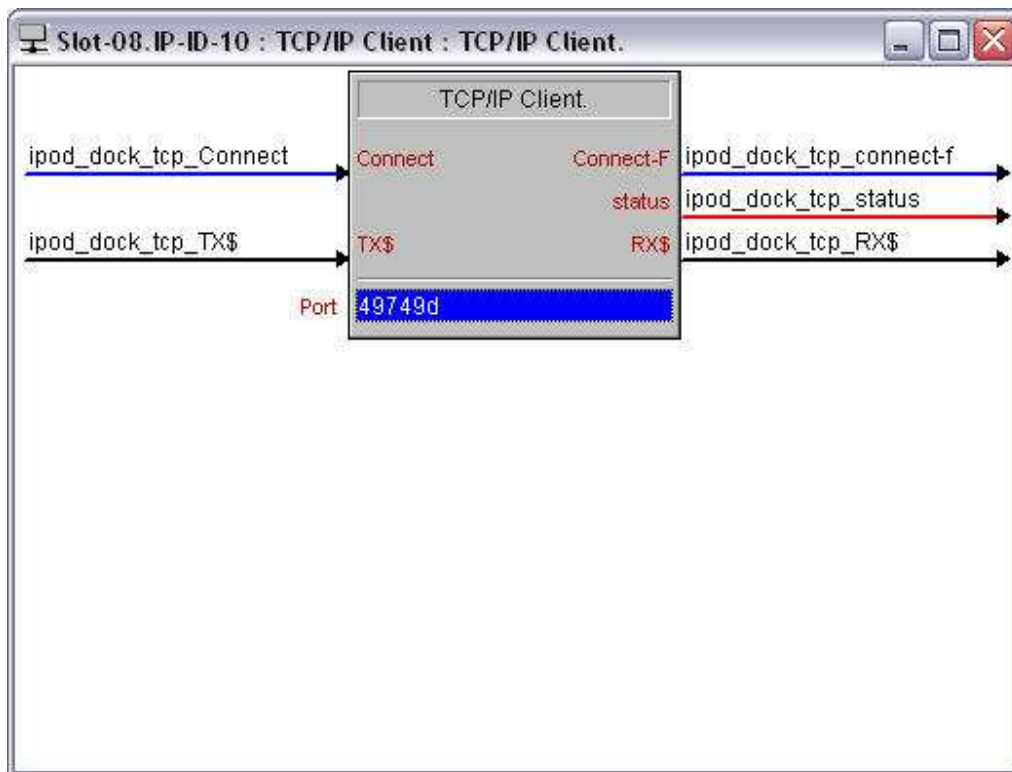


Ethernet Configuration Information

Configure the UDP/IP client as show below, taking care to enter the IP address of 239.255.85.82. This address is the multicast address for the PSX-2 dock. The IP ID will vary depending on what order IP devices are entered into your program, or the IP ID number scheme of your system.



Declare the TCP/IP client as shown below, taking care to set the port to 49749d.

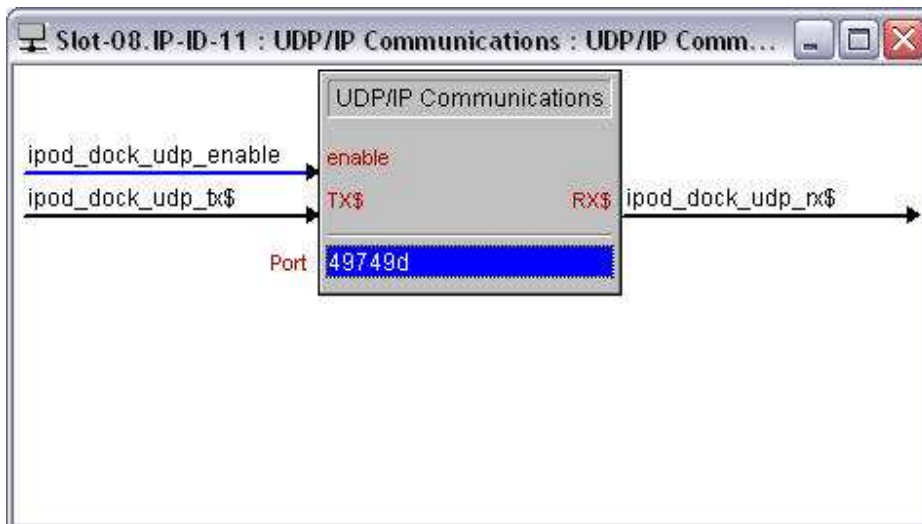

Module Application

UDP/IP Broadcast

The PSX-2 utilizes UDP/IP broadcast updates for real-time feedback. This can be very taxing on the Crestron Ethernet port, especially when a track is playing and the dock is updating the time of the currently playing track. Great care should be taken in when the UDP/IP client is enabled. The caveat to this is that the dock sends several key status updates, such as when an iPod is inserted or removed, over UDP/IP only.



TCP/IP Connections

The PSX-2 utilizes TCP/IP for commands and some feedback as a result of those commands. The dock will not allow a TCP/IP connection to be held open. Once connected, it will allow for a command and response, and then it will drop the connection. It is important to connect the signals between the module and the TCP/IP client as described above in the "Ethernet Configuration Information" for the module to function properly.

Virtual Connection Logic

This module includes virtual connection logic. This enables the programmer to right-click and drag the module to other program symbols to have the signals auto-connect.

To auto-connect signals between the PSX-2 module and the TCP/IP client, right-click the module and drag your cursor to the TCP/IP Client symbol and release. Select "Import Device Logic" from the context menu. You will then be prompted to enter a prefix for the signals that are about to be created. "psx-2 tcp" is the suggested prefix, but you may enter whatever fits your programming style, as long as this prefix differs from the one used for the UDP/IP Client symbol.

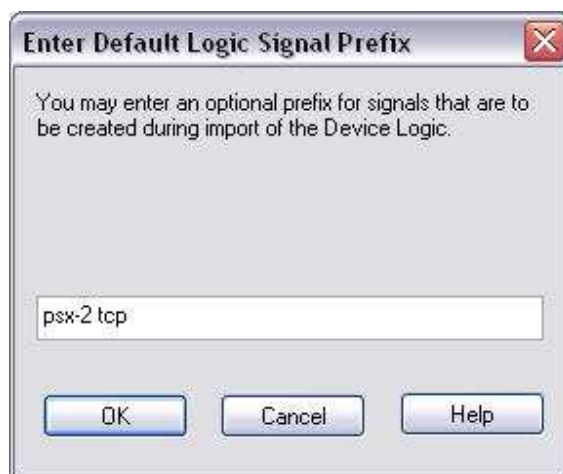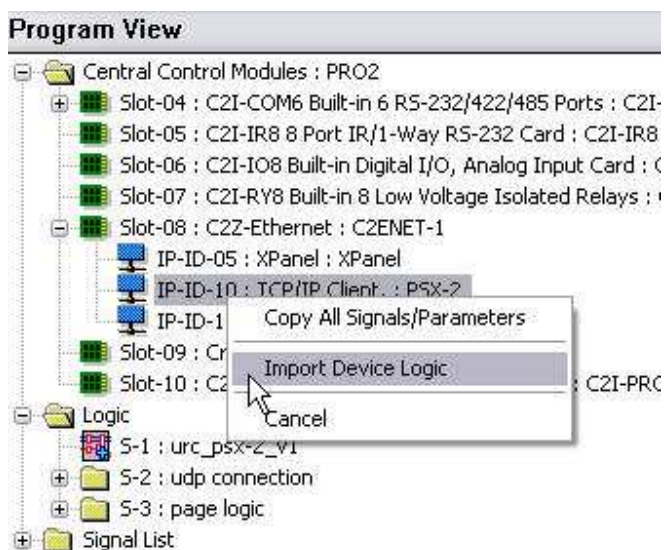

To auto-connect signals between the PSX-2 module and the UDP/IP client, right-click the module and drag your cursor to the UDP/IP Client symbol and release. Select "Import Device Logic" from the context menu. You will then be prompted to enter a prefix for the signals that are about to be created. "psx-2 udp" is the suggested prefix, but you may enter whatever fits your programming style, as long as this prefix differs from the one used for the TCP/IP Client symbol.

Signal and Parameter Descriptions

Bracketed signals such as “[signal_name]” are optional signals

DIGITAL INPUTS

[dock_tcp-ip_client_connected]	Route from the TCP-IP symbol. This is latched high when the tcp-ip client has successfully connected to the device.
[dock_udp_enable_connection]	Pulse to enable UDP-IP communications with the device. To avoid unnecessary traffic to the Crestron processor’s Ethernet port, this should only be used when real-time status from the device is needed.
[dock_udp_disable_connection]	Pulse to disable UDP-IP communications with the device.
[dock_udp_toggle_connection]	Pulse to toggle UDP-IP connection to the device.
[transport_play]	Pulse to play currently selected content on the device. Play will only work if there is something selected, will only work to play content that is paused.
[transport_pause]	Pulse to pause the currently playing content.
[transport_play-pause_toggle]	Pulse to toggle playback of content between play and pause.
[transport_stop]	Pulse to stop playback of currently playing content. Removes all items from the now playing queue.
[transport_fast_forward]	While being held high, fast forwards currently playing content. Resumes playback at normal speed when released.
[transport_rewind]	While being held high, fast reverses currently playing content. Resumes playback at normal speed when released.
[transport_next_track]	Pulse to skip to the next track in the now playing queue.
[transport_previous_track]	Pulse to skip to the previous track in the now playing queue.
[transport_next_chapter]	Pulse to skip to the next chapter in the now playing queue. This is used for some video content.
[transport_previous_chapter]	Pulse to skip to the previous chapter in the now playing queue. This is used for some video content.
[transport_next_playlist]	Pulse to skip to the next playlist.
[transport_previous_playlist]	Pulse to skip to the previous playlist.
[transport_next_album]	Pulse to skip to the next album.
[transport_previous_album]	Pulse to skip to the previous album.
[transport_next_artist]	Pulse to skip to the next artist.
[transport_previous_artist]	Pulse to skip to the previous artist.
[shuffle_off]	Pulse to set shuffle mode to off.
[shuffle_track]	Pulse to set shuffle mode to shuffle tracks.
[shuffle_album]	Pulse to set shuffle mode to shuffle album.
[repeat_off]	Pulse to set repeat mode to off.
[repeat_track]	Pulse to set repeat mode to repeat tracks.
[repeat_album]	Pulse to set repeat mode to repeat album.
[browse_main_home]	Pulse to start browsing from the main level.
[browse_audio_playlist_home]	Pulse to browse to a list of playlists.
[browse_artist_home]	Pulse to browse to a list of artists.

[browse_album_home]	Pulse to browse to a list of albums.
[browse_genre_home]	Pulse to browse to a list of genres.
[browse_track_home]	Pulse to browse to a list of songs.
[browse_composer_home]	Pulse to browse to a list of composers.
[browse_audiobook_home]	Pulse to browse to a list of audiobooks.
[browse_podcast_home]	Pulse to browse to a list of podcasts.
[select_line1] - [select_line15]	Pulse to select the line of text being displayed.
[play_line1] - [play_line15]	Pulse to play the line of text being displayed.
[browse_back]	Pulse to browse back to the previous selection.
[browse_next_page]	Pulse to browse to the next page of entries in the current selection.
[browse_previous_page]	Pulse to browse to the previous page of entries in the current selection.
[browse_last_page]	Pulse to browse to the last page of entries in the current selection.
[browse_first_page]	Pulse to browse to the first page of entries in the current selection.
[enable_tcp_polling]	Pulse to enable periodic polling over TCP-IP. This should be used for keeping track of several status items while not connected to the device via UDP-IP.
[refresh_play_status]	Pulse to get current playback status and track information.
[dock_get_track_info]	Pulse to get currently playing track information.
[dock_get_info]	Pulse to get basic IPOD information.
[dock_get_preference_values]	Pulse to get IPOD preference information.
[dock_get_dock_info]	Pulse to get basic dock information.
[dock_get_dock_state_info]	Pulse to get various dock status information
[jukebox_home]	Pulse to browse to a list that contains the contents of the Jukebox.
[jukebox_add_current_song]	Pulse to add the currently playing song to the Jukebox.
[jukebox_clear_all]	Pulse to clear the entire contents of the Jukebox.
[jukebox_play_all]	Pulse to immediately play the contents of the Jukebox, starting from the first song in the Jukebox.
[osd_xxx]	Pulse these commands to navigate the on-screen display of the dock.

ANALOG INPUTS

dock_tcp-ip_status	Route from the TCP/IP client symbol. Provides the status of the TCP/IP connection to the module.
--------------------------	--

SERIAL INPUTS

dock_tcp-ip_rx\$	Route from the RX\$ of the TCP/IP client symbol. This is the data received from the device.
ipod_dock_udp_rx\$	Route from the RX\$ of the UDP/IP client symbol. This contains the unsolicited feedback fro the device.

DIGITAL OUTPUTS

dock_tcp-ip_connect	Route to the Connect on the TCP/IP client symbol. This allows the module to control when to connect and disconnect to/from the device. It is important to let the module handle this connection, as the dock will drop a connection if it is held open.
[dock_udp_connect]	Route to the Connect on the UDP/IP client symbol.
[transport_playing]	Latched high when the dock reports that the IPOD is currently playing a track.

[transport_paused]	Latched high when the dock reports that the iPod is currently paused.
[transport_stopped]	Latched high when the dock reports that the iPod is currently stopped.
[transport_fast_forwarding]	Latched high when the dock reports that the iPod is currently fast forwarding.
[transport_rewinding]	Latched high when the dock reports that the iPod is currently fast reversing.
[shuffle_off_fb]	Latched high when the dock reports that the current shuffle mode is off.
[shuffle_track_fb]	Latched high when the dock reports that the current shuffle mode is set to shuffle tracks.
[shuffle_album_fb]	Latched high when the dock reports that the current shuffle mode is set to shuffle albums.
[repeat_off_fb]	Latched high when the dock reports that the current repeat mode is set to off.
[repeat_track_fb]	Latched high when the dock reports that the current repeat mode is set to repeat tracks.
[repeat_album_fb]	Latched high when the dock reports that the current repeat mode is set to repeat albums.
[tcp_polling_enabled]	Latched high when TCP polling is set to on.
[dock_busy_downloading_cover_art_fb]	Latched high when the dock reports that it is busy downloading cover art from the iPod. The dock will not accept commands when this is high.
[dock_no_ipod_fb]	Latched high when the dock reports that there is not an iPod docked.
[ipod_battery_charging_fb]	Latched high when the dock reports that the iPod battery is currently charging.
[ipod_battery_charged_fb]	Latched high when the dock reports that the iPod battery is fully charged.
[ipod_video_out_ntsc]	Latched high when the dock reports that the video output format of the iPod is set to NTSC.
[ipod_video_out_pal]	Latched high when the dock reports that the video output format of the iPod is set to PAL.
[ipod_video_out_fullscreen_fb]	Latched high when the dock reports that the video output aspect of the iPod is set to fullscreen.
[ipod_video_out_widescreen_fb]	Latched high when the dock reports that the video output aspect of the iPod is set to widescreen.
[ipod_video_out_mode_off_fb]	Latched high when the dock reports that the video output of the iPod is turned off.
[ipod_video_out_mode_on_fb]	Latched high when the dock reports that the video output of the iPod is turned on.
[ipod_video_out_mode_ask_fb]	Latched high when the dock reports that the video output of the iPod is set to prompt the user when attempting to play video content.

ANALOG OUTPUTS

[browse_current_page].....	Outputs the current page of results displayed in the list.
[browse_total_pages]	Outputs the total number of pages available based on the last query and the number of lines being displayed on the user interface.
[playlist_total_tracks]	Outputs the total number of tracks available in the current playlist.
[playlist_current_track]	Outputs the currently playing track's position in the current playlist.
[current_track_elapsed_time].....	Outputs the elapsed time of the currently playing track, formatted to route to a Timer symbol on a user interface.
[current_track_total_time]	Outputs the total track length of the currently playing track, formatted to route to a Timer symbol on a user interface.
[current_track_remaining_time]	Outputs the time remaining of the currently playing track, formatted to route to a Timer symbol on a user interface.
[play_multimode_line1] - [play_multimode_line15].....	Outputs a value of 1 or 0. Route to a multimode button on the user interface. This is used to enable/disable the display of a Play button next to a line in the browse menu, based on whether there is a line displayed. 1 is used to indicate that the button should be available to the user. 0 indicates that the button should not be displayed.
[browse_back_multimode]	As with the above multimode values. Indicates whether the Browse Back button should be available on the user interface or not.
[browse_previous_page_multimode]	As with the above multimode values. Indicates whether the Browse Previous Page button should be available on the user interface or not.
[browse_next_page_multimode]	As with the above multimode values. Indicates whether the Browse Next Page button should be available on the user interface or not.
[browse_last_page_multimode]	As with the above multimode values. Indicates whether the Browse Last Page button should be available on the user interface or not.
[browse_first_page_multimode].....	As with the above multimode values. Indicates whether the Browse First Page button should be available on the user interface or not.

SERIAL OUTPUTS

dock_tcp-ip_tx\$	Route to the TX\$ of the TCP/IP client symbol.
[dock_udp-ip_tx\$]	Route to the TX\$ of the UDP/IP client symbol. This is only included for the auto connect logic built in to the module and is not actually used.
[current_playlist_name\$]	Contains the name of the currently playing playlist.
[current_track_title\$]	Contains the title of the currently playing song.
[current_album_name\$]	Contains the name of the currently playing album.
[current_artist_name\$]	Contains the name of the currently playing artist.
[current_genre\$]	Contains the name of the currently playing genre.
[current_composer\$]	Contains the name of the currently playing composer.
[display_list_title\$]	Contains text that describes what is currently being browsed. i.e. "Playlist", "Album", etc.
[display_list_text1\$] - [display_list_text15\$]	Contains the list of items that are currently being browsed. Only 1 through the number defined on the parameter, "number_of_browsing_lines" (up to 15) will have strings output.
[dock_name\$]	Outputs the name of the dock that this instance of the module is connected to.
[ipod_name\$]	Outputs the name of the IPOD that is currently inserted into the dock.

PARAMETERS

number_of_browsing_lines	Set to an analog value of 1d to 15d, depending on the number of lines available on the user interface.
--------------------------------	--

Support

This module is supported by ControlWorks Consulting, LLC. Should you need support for this module please email support@controlworks.com or call us at 440-449-1100. ControlWorks normal office hours are 9 AM to 5 PM Eastern, Monday through Friday, excluding holidays.

Before calling for support, please ensure that you have loaded and tested operation using the included demonstration program and touchpanel(s) to ensure that you understand the correct operation of the module. It may be difficult for ControlWorks to provide support until the demonstration program is loaded.

Updates, when available, are automatically distributed via Email notification to the address entered when the module was purchased. In addition, updates may be obtained using your username and password at <http://www.controlworks.com/customerlogin.aspx> .

Distribution Package Contents

The distribution package for this module should include:

urc_psx-2_v3.umc	Crestron User Module for controlling the dock
urc_psx-2_engine_v3.usp	SIMPL+ file used within the dock control module
urc_psx-2_engine_v3.ush	SIMPL+ header file
utf-8_processor_v1.usp	SIMPL+ file used withing the dock control module
utf-8_processor_v1.ush	SIMPL+ header file
urc_psx-2_demo_xpanel_v3.vtp	Demo touchpanel file for XPANEL touchpanel
urc_psx-2_demo_v3.smw	Demo program for PRO2 processor
urc_psx-2_help_v3.pdf	Help file

Revision History

- V1 gary@controlworks.com 03-29-2010
-initial release
- V2 gary@controlworks.com 11-12-2010
-added support for IR emulation of OSD controls
-tested for 3-Series compatibility
- V2.1 gary@controlworks.com 06-28-2011
-added page up and page down to osd functionality.
- V3 gary@controlworks.com 03-16-2012
-fixed 3-Series issues.

Development Environment

This module version was developed on the following hardware and software. Different versions of hardware or software may or may not operate properly. If you have questions, please contact us.

URC Hardware	Software Version
PSX-2	1.2.0
Hardware	Firmware Version
Crestron MC3 Processor	1.002.0000
Software	Software Version
Crestron SIMPL Windows	3.11.06.00
Crestron Vision Tools Pro-e	5.0.23.02
Crestron Database	30.01.004.00
Device Database	40.01.004.00

ControlWorks Consulting, LLC

Module License Agreement

Definitions:

ControlWorks, *We*, and *Us* refer to ControlWorks Consulting, LLC, with headquarters located at 701 Beta Drive, Suite 22 Mayfield Village, Ohio 44143-2330. *You* and *Your* refers to the individual or entity purchasing the Module. *Client* and *End User* refer to the person or entity for whom the Crestron hardware is being installed and/or will utilize the installed system. *System* refers to all components described herein (including the Module and source files with extensions such as UMC, USP, SMW and VTP) as well as other components, services, or utilities required to achieve the functionality described herein. *Module* refers to the software module and related source code purchased and licensed pursuant to this agreement. *Demo Program* refers to a group of files used to demonstrate the capabilities of the Module, for example a SIMPL Windows program and VisionTools Touchpanel file(s) illustrating the use of the Module but not including the Module. *Software* refers to the Module and the Demo Program.

Dealer Representation

By using the Software, you represent and warrant that You are an authorized dealer or partner of Crestron Electronics, Inc. and are authorized to use the Crestron development tools. *If you are an End User or do not have a valid license to use the Crestron development tools we recommend that you have your Crestron dealer purchase the Module in order to fully utilize the functionality and take advantage of future updates and technical support.*

Disclaimer of Warranties

ControlWorks software is licensed to You as is. CONTROLWORKS HEREBY DISCLAIMS ALL WARRANTIES OF ANY KIND, EXPRESS OR IMPLIED, WITH RESPECT TO THE SOFTWARE OR ANY SERVICES PROVIDED BY CONTROLWORKS, INCLUDING, WITHOUT LIMITATION, THE WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT OF THIRD PARTY RIGHTS AND FITNESS FOR A PARTICULAR PURPOSE. You, and any other parties using the Software, bear the entire risk relating to the use of the Software. In no event will ControlWorks be liable for direct, indirect, incidental or consequential damages resulting from any use of the Software, even if ControlWorks had reason to know of the possibility of such damage. If the Software proves to have defects, You are solely liable for the cost of any necessary service or repair resulting from such defects.

Provision of Support

We provide limited levels of technical support only for the most recent version of the Module as determined by Us and solely to those who are authorized to use the Software (see the "Dealer Representation" paragraph above). We do not provide support for previous versions of the Module, modifications to the Module not made by Us, or persons who have not purchased the module from Us. In addition, we may decline to provide support if the Demo Program has not been utilized or for any other reason whatsoever. We may withdraw a Module from sale and discontinue providing support at any time and for any reason, including, for example, if the equipment for which the Module is written is discontinued or substantially modified. The remainder of your rights and obligations pursuant to this license will not be affected should ControlWorks discontinue support for a Module.

Modification of Software

You may not decrypt (if encrypted), reverse engineer, modify, translate, disassemble, or de-compile the Module in whole or part. You may modify the Demo Program; provided, however, if You modify the Module in any manner you may be forfeiting Your right to receive support from ControlWorks as determined in its sole discretion. If You request support for a Module that has been modified, You may be required to revert to the unmodified version of the Module before ControlWorks will consider providing support. In no event will ControlWorks be liable for direct, indirect, incidental or consequential damages resulting from You modifying the Software in any manner.

Indemnification/Hold Harmless

ControlWorks, in its sole and absolute discretion, may refuse to provide support for the application of the Module in such a manner that We feel has the potential for property damage, or physical injury to any person. You shall indemnify and hold harmless ControlWorks, its employees, agents, and owners from any and all liability, loss or damage, including, but not limited to, direct, indirect, and consequential damages (including reasonable attorneys' fees and expenses), personal injury, property damage, or lost profits, which may result from (i) the operation of a program containing the Software (including a ControlWorks Module) or any component thereof, (ii) any breach of this agreement by You, and (iii) use of any other third party software and hardware.

License Grant

Software authored by ControlWorks remains the property of ControlWorks. Subject to the limitations set forth below, ControlWorks grants You the non-exclusive, non-transferable, limited, perpetual license to use the Software authored by ControlWorks as a component of Systems programmed by You. This Software is the intellectual property of ControlWorks and is protected by law, including United States and International copyright laws. This Software and the accompanying license may not be transferred, resold, or assigned to other persons, organizations or other Crestron dealers via any means.

Limitations on License

If You are not an authorized Crestron dealer or partner with a valid license to use the Crestron development tools, Your ability to legally utilize the Software is severely limited and Your use thereof may be in violation of this agreement and the proprietary rights of other third parties, including Crestron. ControlWorks will not provide support to any person or entity using the Software in an unauthorized manner, which shall be determined in ControlWorks' sole discretion. The license granted under this agreement is granted solely to the Crestron dealer or partner who purchased the Module and does not extend to and may not be transferred to any other Crestron dealers, even if such dealers are servicing a System that contains a Module that was purchased by a prior dealer.

You or any third party may not: (a) sell, lease, lend, rent or distribute (including through the Internet) the Software (or any portion thereof) to any third party; (b) use the Software for any purpose other than for developing Systems; or (c) remove, alter, or obscure any product identification, copyright, trademark, or other intellectual property notices embedded within the Software or included in any related explanatory files and written materials provided by ControlWorks.

The use of this software indicates acceptance of the terms of this agreement.

042373, 000001, 103790294, ControlWorks - Module License
